


August 2016

## WOLF CLASSIC CABINETS BASE WASTE BASKET (BWB18)

### SLIGHT BIND VERSUS SMOOTH SLIDING MOTION WHEN OPENING AND CLOSING WOLF CLASSIC BWB18 DOOR-MOUNTED WASTE BASKET

If you or your customers have operation concerns, Wolf Home Products recommends the following steps to create a smooth, sliding motion. No tools required.

1. Remove waste bins. Uninstall the deck from glide mechanisms by pushing up on one glide removal tab and down on the opposite removal tab while pulling out the waste bin deck.

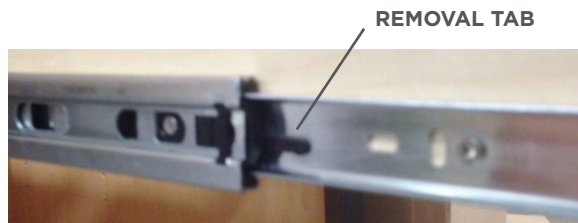


2. Once removed, inspect both glides mounted on the cabinet.

#### CORRECT



#### INCORRECT

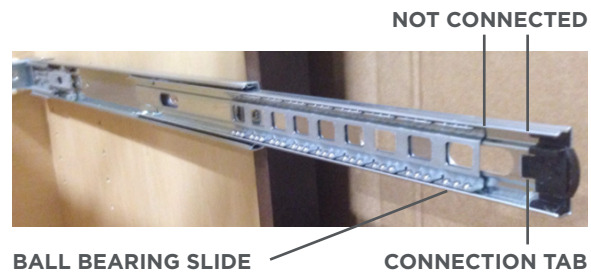

If you find a “not connected” condition

1. Push the ball bearing slide onto the connection tab
2. Repeat on opposite side
3. Reinstall drawer and waste bins

