

WOLF DISTINCTION™ RAILING

DETERMINING BALUSTER SPACING



For detailed installation instructions, please visit wolfhomeproducts.com

LEVEL RAILING INSTRUCTIONS

To locate balusters in a level railing section, take the rail length dimension to the scale below and find the two numbers that your dimension falls between. There it will tell you to start with or without a center baluster. If you land exactly on one of the scaled measurements below, then favor the yes or no to the left to avoid irregularities in baluster spacing. Measure and mark the middle of the top and bottom rail caps where balusters will contact the rails. Starting in the middle of the top and bottom rail caps use the baluster spacing gauge to begin baluster attachment.

STAIR RAILING INSTRUCTIONS

To locate balusters in a stair railing section take the dimensions measured horizontally between the posts to the scale below and find the two numbers that your dimensions falls between. There it will tell you to start with or without a center baluster. If you land exactly on one of the scaled measurements below, then favor the yes or no to the left to avoid irregularities in baluster spacing. Measure and mark the middle of top and bottom rail caps. Starting in the middle of the top and bottom rail caps use the baluster spacing gauge to begin baluster attachment.

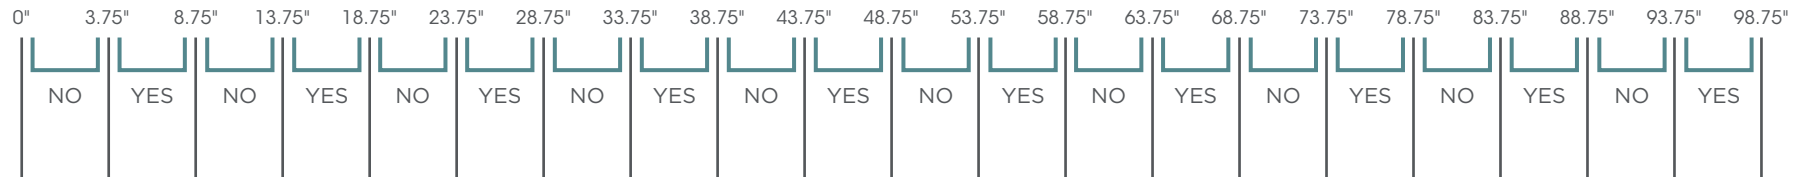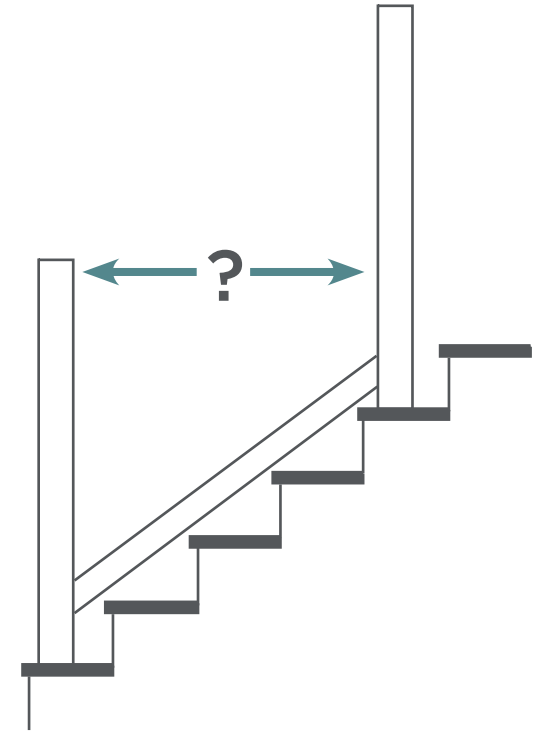

For detailed installation instructions, please visit wolfhomeproducts.com

KITCHEN & BATH | OUTDOOR LIVING | BUILDING PRODUCTS

wolfhomeproducts.com

© 2018 Wolf Home Products. All Rights Reserved.



WOLF HOME PRODUCTS®