



Quick and easy patented snap design.



WOLF HOME PRODUCTS®



Kitchen & Bath



Outdoor Living



Building Products



All photos are representative of products. Please review an actual product sample with your dealer before making your final selection.

wolfhomeproducts.com | © 2017 Wolf Home Products. All Rights Reserved.

TM\_CWB\_0317\_HFA



LOOKS GREAT, **LASTS LONGER**



WOLF HOME PRODUCTS®

PVC COLUMN WRAPS

# EASY TO INSTALL. EASY TO ADMIRE.

Wolf PVC Column Wraps feature a patented snap design to make installation quick and simple.

Quick, easy installation

Patented snap design

Six sizes available

High-density PVC won't peel or rot

Virtually impervious to moisture and insects

Never needs to be painted — unless desired

If painting, use 100% acrylic latex paint in light colors with a light reflective value of 55 units or greater

No external fasteners required

Full line of accessories available



## BELMONT CAP



NOMINAL DIMENSIONS	ACTUAL INSIDE DIMENSIONS	ACTUAL OUTSIDE DIMENSIONS
4" x 4" Column Wrap	3 3/4" x 3 3/4"	4 3/4" x 4 3/4"
6" x 6" Column Wrap	5 3/4" x 5 3/4"	6 3/4" x 6 3/4"
8" x 8" Column Wrap	8 1/2" x 8 1/2"	9 1/2" x 9 1/2"

4" x 4", 6" x 6" and 8" x 8" are available in 8 1/2' and 10' lengths.

## FINISH THE JOB IN MINUTES

### COLUMN WRAP



#### STEP 1

Apply a 1/16" bead of adhesive\* at the snap joint on the tongue (not into the groove) and a 1/8" bead along the total length inside each V-groove.


**Note:** Excessive adhesive in the snap lock may result in a sink line on the outside surface.



#### STEP 2

Position the column wrap around the post and "snap" the edges together, ensuring a tight closure.

Once the adhesive has set (typically 24 hours), remove the temporary joint tape.

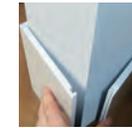

#### STEP 3

**Optional:** To install the collar at the base of the column, follow the column wrap instructions (Steps 1 & 2) above.

### BED AND BASE MOLDING TRIM KIT\*\*



#### STEP 1

Slide dovetail connectors into the pre-cut slots.



#### STEP 2

Slide the molding into the desired location on the column.



#### STEP 3

Join the two corners using a dovetail at each corner with a small amount of adhesive.



\*Wolf recommends professional-grade PVC TrimWelder products — Fast Cure or Slow Cure — from Extreme Adhesives.

\*\*Each kit contains four pre-cut pieces of molding and dovetail corner connectors, mitered and notched. Use with professional-grade PVC TrimWelder products for secure installation.